

SL / BL Series Air Handler
Installation Instructions

AllStyle Coil Company, LP

P.O. Box 40696
Houston, TX 77240
Fax- (713)466-6363

**SL / BL Series
Air Handlers Upflow / Horizontal Left or Right**

Installation – Operation – Maintenance

The SL/BL series is designed for installation in a closet, utility room, alcove, basement, crawlspace or attic. These versatile units are applicable to flowrator, expansion valve, or check and expansion valve DX air conditioning, and heat pump applications. Several models are available to meet the specific requirements of the outdoor equipment. Factory installed electric resistance heaters are available.

Installation Instructions

Installation of this unit shall be made in accordance with the National Electric Code, NFPA No. 90A and 90B, and any other local codes or utilities requirements.

WARNING:

Due to possible damage to equipment or personal injury, installation, service and maintenance should be performed by a trained, qualified person. Consumer service is recommended only for filter replacement.

WARNING:

Insure all power is disconnected before installing or servicing this unit. More than one disconnect device may be required to de-energize the equipment. Hazardous voltage can cause sever personal injury. Make certain all panels are in place before operating the unit.

IMPORTANT:

It is not necessary to remove the coil during installation. The SL/BL Series Units may be installed in the vertical upflow position or either the left or right hand horizontal position.

IMPORTANT SL SERIES UNIT:

The horizontal water shield is installed at the factory in the left hand position. If installed in the horizontal right hand position, remove the water shield and place on the other side. When installed in the vertical position remove the horizontal water shield.

THE BL SERIES UNIT DO NOT REQUIRE REPOSITIONING OF DRAIN PAN. UNIT IS SHIPPED WITH HORIZONTAL LEFT, HORIZONTAL RIGHT AND UPFLOW PANS INSTALLED.



SL / BL Series Air Handler
Installation Instructions

Installation – Operation – Maintenance

Unpacking

Carefully unpack the unit and inspect the contents for damage. If any damage is found at the time of delivery, proper notification and claims should be made with the carrier who delivered the unit.

Check the rating plate to assure model number and voltage, plus any kits agree with what you ordered. The manufacturer should be notified within 5 days of any discrepancy or parts shortage.

Location

The blower coil unit should be centrally located and may be installed in a closet, alcove, utility room, basement, crawlspace or attic with zero clearance from any side, front, rear or duct work.

The unit must be installed in a level position to ensure proper condensation drainage. Make sure the unit is level in both directions within 1/8" on either side.

When the unit is installed in a closet or utility room, the room should be large enough, and have an opening to allow replacement of the unit. All servicing is done from the front and a clearance of 24" is needed for service unless the closet door aligns with the front of the furnace.

If you are installing the unit in an unconditioned space such as an attic or crawlspace, you must ensure that the area provides sufficient air circulation to prevent moisture collection on the cabinet during high dew point conditions. A drain pan must be installed under the entire unit when it is installed above a finished ceiling or location in an unconditioned space.

Duct Work

The duct work should be installed in accordance with the NFPA No. 90A "Installation of Air Conditioning and Ventilating systems" and No. 90B "Residential Type Warm Air Heating and Air Conditioning Installation."

The duct work should be insulated in accordance with the applicable requirements for the particular type installation as required by HUD, FHA, VA the applicable building code, local utility or other governing body.

Condensate Drain

The unit is supplied with 3/4 inch primary and auxiliary condensate drains. Both drains must be trapped outside the unit and piped in accordance with applicable building codes. Do not reduce the drain line size less the connection size on the drain pan. Condensate should be piped to an open drain or to the outside. All drains must pitch downward away from the unit a minimum of 1/8" per foot of line to ensure proper drainage.

Refrigerant Piping

Refrigerant pipe connections are located on the top of the unit. Refrigerant piping external to the unit shall be sized in accordance with the instructions of the manufacturer of the outdoor equipment. When units are recessed mounted in the wall, make certain that piping connections are pressure tested prior to the wall being closed.

Metering Device

All units are shipped with a checkflow piston installed which is designed for air conditioning or heat pump operation. If your application requires a thermal expansion valve or check expansion valve then it is necessary to remove the piston from the distributor assembly and install the proper metering device. Be sure to follow the instruction in the kit to ensure proper installation.

Blower

This unit is supplied with a multi-speed motor with a direct drive blower wheel which can obtain various air flows. The unit is shipped with the blower connected for high speed. If a lower blower speed is required, disconnect all power to the unit, remove the black indoor fan motor lead from the fan relay, place an insulated cap on the black lead, remove the insulated cap from the red indoor fan motor lead, place a spade connector on the lead and connect it to the fan relay where the black lead was originally connected. Be sure to check the air flow and the temperature drop across the evaporator coil to ensure that you have sufficient air flow.

SL / BL Series Air Handler Installation Instructions

Wiring

Consult all schematic and pictorial wiring diagrams of this unit and the outdoor equipment to determine compatibility of the wiring connections and to determine specific requirements.

All field wiring to the blower coil should be installed in accordance with the latest edition of the National Electric Code NFPA No. 70 and any local codes. Check rating plates on unit for rated volts, minimum circuit ampacity and maximum over current protection. Supply circuit power wiring must be 75 degree C. (167 degree F) minimum copper conductors only. Copper supply wires shall be sized to the National Electric Code or local code requirements, whichever is more stringent.

The unit is shipped wired for 230/240 Volt AC 60 HZ 1 Phase Operation. If the unit is to operated at 208 VAC 60HZ, then follow the instruction on the indoor unit wiring diagram to change the low voltage transformer to 208 VAC operation.

Be sure the unit is properly grounded.

Class 2 low voltage control wiring should not be run in conduit with power wiring and must be separated from power wiring, unless class 1 wire of proper voltage rating is used. Low voltage control wiring should be 18 Awg, color coded (105 degree C minimum). For lengths longer than 100ft., 16 Awg wire should be used. Make certain that separation of control wiring and power wiring has been maintained.

Air Filter

An air filter must be installed prior to the air entering the evaporator coil to protect the coil, blower and other internal parts from excessive dirt and dust. If the unit is installed for the return air through the unit base, then the internal filter rack may be utilized.

If you decide to use a remote filter, then it should be sized for a maximum of 300 feet/minute air velocity.

If the unit is recess mounted in a wall utilizing the optional wall mount return filter grille, be sure to install a filter in the panel. The door must be fastened in place securely to ensure proper filtration of return air.

Thermostat

Select a thermostat that is commonly referred to as a single stage cooling with electric heat subbase. This stat will energize the fan on a demand for heat or cool.

Install the thermostat on an inside wall, away from drafts, lights or other heat sources in a location that has good air circulation from the other rooms being controlled by the thermostat. The thermostat should be mounted 4 to 5 feet above the floor.

Sequence of Operation

Cooling (cooling only or heat pump with reversing valve energized in heat mode). When the thermostat calls for cooling, the blower relay is energized. The N.O. contacts will close, after a time delay, the indoor blower will operate. The circuit between R and Y is completed: causing the contactor on the outdoor equipment to close and start the compressor and the outdoor fan motor.

Cooling (heat pump with reversing valve energized in cooling mode). When the thermostat calls for cooling, the circuit between R and G and R and O is completed. Circuit R and O energizes the reversing valve to the cooling position, Circuit R and G energizes blower relay. The N.O. contacts will close, after a time delay, the indoor blower will operate. The circuit between R and Y is completed: causing the contactor on the outdoor equipment to close and start the compressor and the outdoor fan motor.

Heating (electric heat only). When the thermostat calls for heat, the circuit between R and W is completed, the heat sequencer is energized. A time delay will occur: Then the heating element(s) and the indoor blower motor will come on.

Heating (heat pump reversing valve energized in heat mode). When the thermostat calls for heat, the circuits between R and B, R and Y and R and G are completed. Circuit R and B energize the reversing valve switching it to the heat position. Circuit R and Y energized the outdoor unit contactor starting the compressor and outdoor fan. Circuit R and G energizes the blower relay starting the blower motor.

If the indoor room temperature should continue to fall, circuit R and W2 is by the second-stage heat bulb on the thermostat. Circuit R-W2 energizes the

SL / BL Series Air Handler Installation Instructions

heat sequencer. The completed circuit will energize the supplemental electric heat.

Blower Time Delay. This unit is equipped with timed on and a timed off relay. This relay delays the start and delays the stopping of the indoor fan motor to maximize the efficiency of the unit.

Defrost. Supplemental heat during defrost can be provided by connecting B on the blower coil to the defrost relay on the outdoor heat pump. This will complete the circuit between R and B (in the blower coil) through a set of contacts in the defrost relay in the outdoor unit when the unit starts the defrost cycle. This circuit, when it is connected, will help prevent cold air from being discharged from the indoor unit during the defrost

Maintenance

The system air filter(s) should be inspected, cleaned or replaced at least monthly. If the filter is mounted internal to unit, make sure that electrical power is disconnected before removing the access panels. Make certain that the access panels are replaced and secured properly before placing the unit back in operation. This product is designed for dependable service; however, periodic maintenance should be scheduled to be conducted by trained professional service personnel. This service should be conducted at least annually, and should include testing and inspection of electrical and refrigerant components. The heat transfer surface should be cleaned. The blower motor is permanently lubricated for normal operating conditions.



Warnings

Do not store or use any corrosives or combustibles in the vicinity of this unit. All panels must be in place and properly secured before operating this equipment.


All electrical power servicing this unit must be disconnected prior to removal of any panels. Service of this unit must be accomplished by qualified trained professional personnel only

Conforms to UL STD 1995

THIS UNIT IS MANUFACTURED IN THE USA BY:

AllStyle Coil Co., LP
P.O. Box 40696
Houston, TX 77240

Models with less than 48 Amps total are equipped with a Terminal Block.

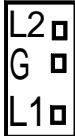


TB-1

USE COPPER CONNECTORS ONLY.
Use Conductors Suitable for 167 Deg F.

MAXIMUM CIRCUIT BREAKER 60 AMP
208/230 VOLTS 21.6/28.8 KW
104/120 TOTAL HEATER AMPS
MINIMUM CIRCUIT AMPACITY 137/157

CIRCUIT NO.2
208-230/60/1


CIRCUIT NO.1
208-230/60/1

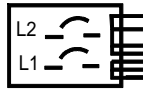

Consult National Code for Wire Size

DIAGRAM REPRESENTS THE MAXIMUM NUMBER OF CONTROLS, HEATERS/CONTROLS WHICH MAY BE INSTALLED. FEWER COMBINATIONS WILL RESULT IN LESS WIRING THAN SHOWN.

Wiring change required to convert transformer to 208 Volts. Disconnect power. Disconnect orange high voltage lead from transformer and cap with an insulated terminal. Connect yellow transformer lead where orange lead was originally connected.

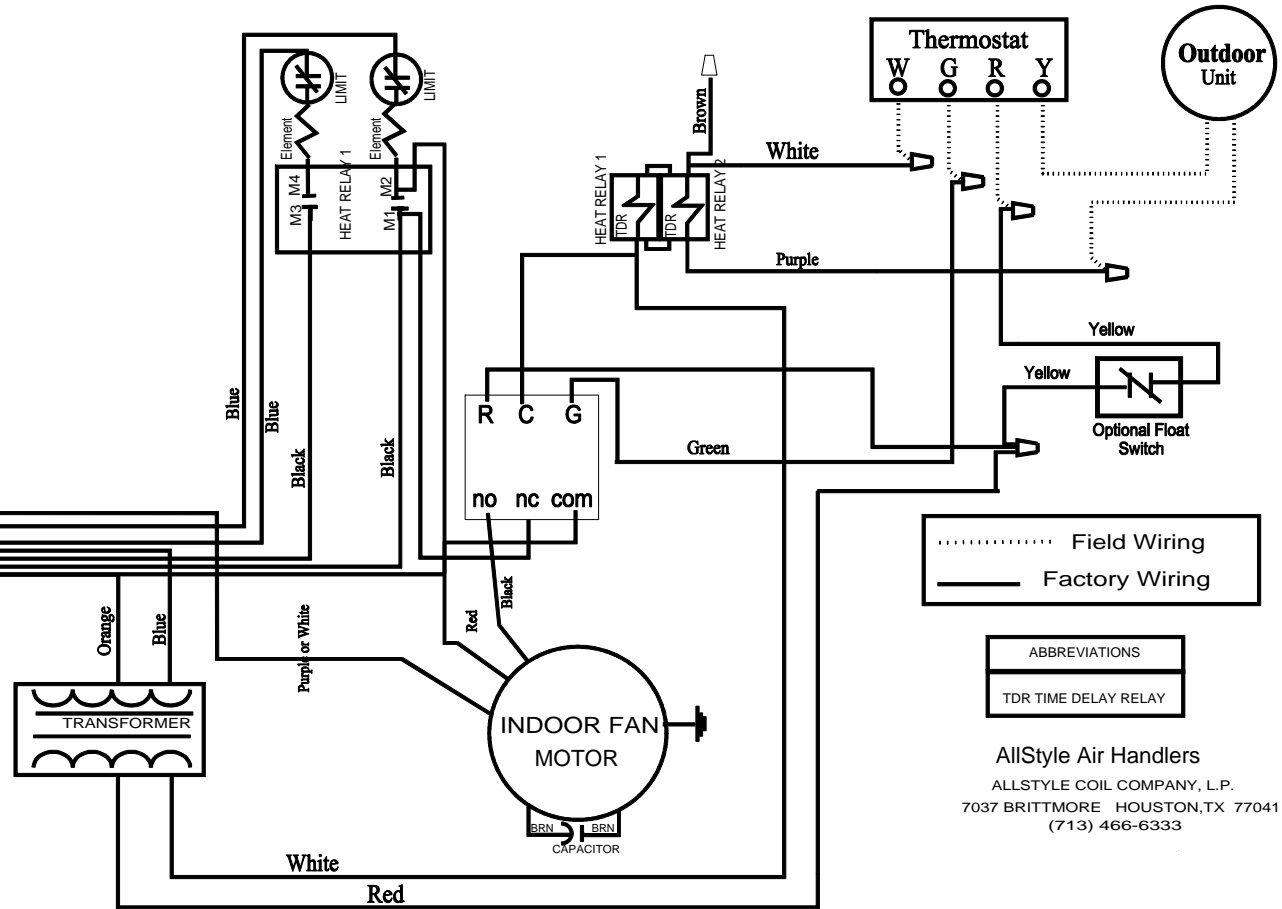

..... Field Wiring
—— Factory Wiring

ABBREVIATIONS
TDR TIME DELAY RELAY

AllStyle Air Handlers
ALLSTYLE COIL COMPANY, L.P.
7037 BRITTMORE HOUSTON, TX 77041
(713) 466-6333

230 VOLTS AC 60 HZ SINGLE PHASE

FORM W01-10 Oct 01


Models with less than 48 Amps total are equipped with a Terminal Block.





TB-1

USE COPPER CONNECTORS ONLY.
Use Conductors Suitable for 167 Deg F.
MAXIMUM CIRCUIT BREAKER 60 AMP
208/230 VOLTS 21.6/28.8 KW
104/120 TOTAL HEATER AMPS
MINIMUM CIRCUIT AMPACITY 137/157

CIRCUIT NO.2
208-230/60/1

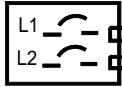


CIRCUIT NO.1
208-230/60/1

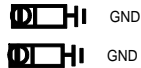 

Consult National Code for Wire Size

DIAGRAM REPRESENTS THE MAXIMUM NUMBER OF CONTROLS, HEATERS/CONTROLS WHICH MAY BE INSTALLED. FEWER COMBINATIONS WILL RESULT IN LESS WIRING THAN SHOWN.

Wiring change required to convert transformer to 208 Volts. Disconnect power. Disconnect orange high voltage lead from transformer and cap with an insulated terminal. Connect yellow transformer lead where orange lead was originally connected.

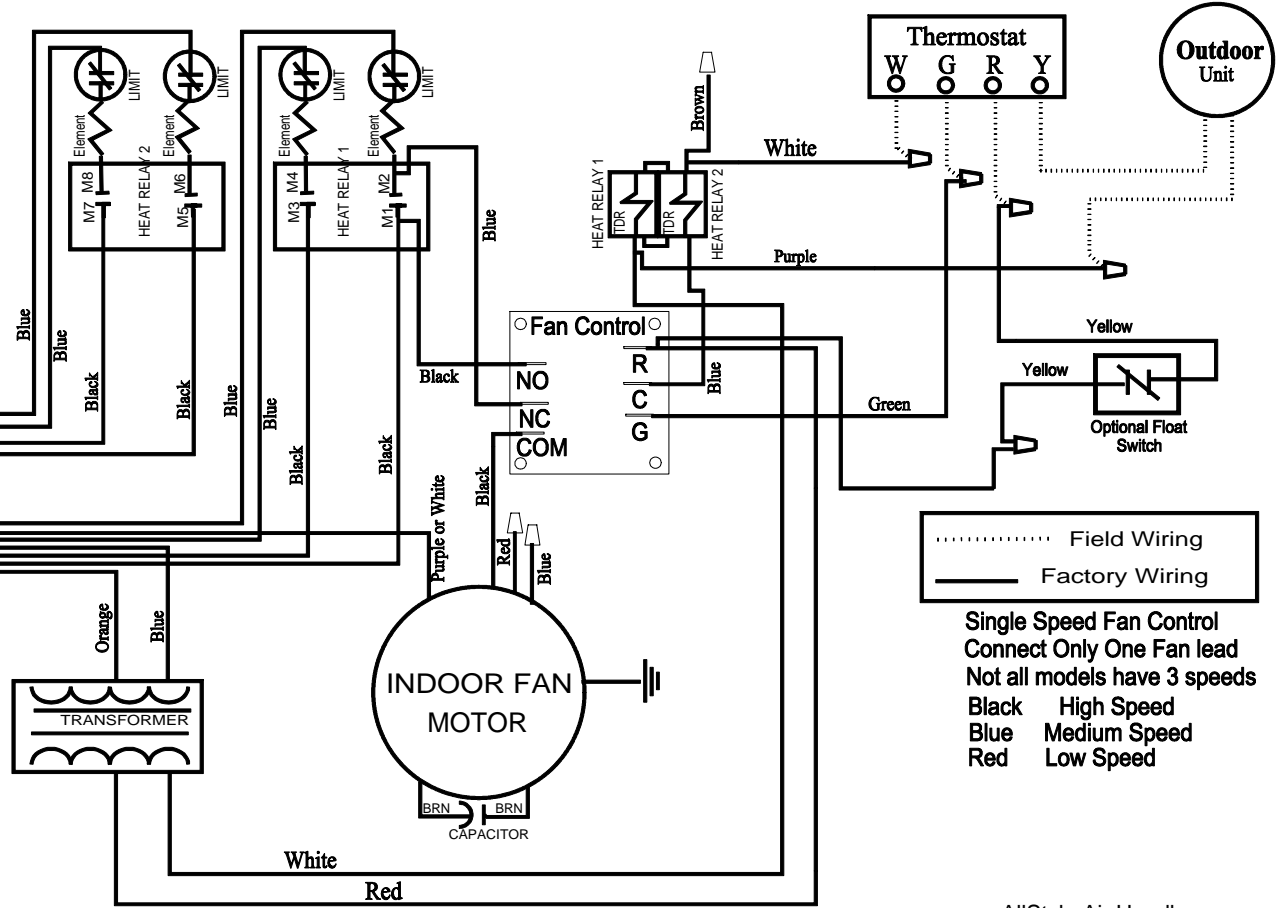

..... Field Wiring
—— Factory Wiring

Single Speed Fan Control
Connect Only One Fan lead
Not all models have 3 speeds
Black High Speed
Blue Medium Speed
Red Low Speed

AllStyle Air Handlers
ALLSTYLE COIL COMPANY, L.P.
7037 BRITTMORE HOUSTON, TX 77041
(713) 466-6333

230 VOLTS AC 60 HZ SINGLE PHASE

FORM W02-10 SEP02